2004 Cadillac XLR: Resetting the Engine Oil Life Monitor

Below is the procedure for resetting the engine oil life monitor on the 2004 Cadillac XLR:

- 1. Press the up or down arrow to scroll the DIC to show OIL LIFE.
- 2. Once the XXX% ENGINE OIL LIFE menu item is highlighted, press and hold the RESET button until the percentage shows 100%. Repeat the steps if the percentage does not return to 100.
- 3. Turn the key to OFF.

If the Change Oil Now message comes back when you start the vehicle, the engine oil life system has not reset. Repeat the procedure.

- May 2003 GM TechLink

Online URL:

https://www.xlr-net.com/knowledgebase/article/2004-cadillac-xlr-resetting-the-engine-oil-life-monitor-76.html